

# INSTRUCTIONS FOR CHOCOLATE FOUNTAIN

- The feet on the fountain are adjustable to allow you to level the fountain for consistent flow around the entire fountain.
- The fountain must be at least 1/4" from the surface on which it sits to allow sufficient airflow to enter the base and cool the motor.
- The fountain requires approximately 15 lbs of chocolate for normal use. Use of the small setup requires a minimum of 7.5 lbs. of chocolate. The chocolate that ABC Rental sells and recommends is "Sir Chocolate" chocolate fondue and no oil is needed to gain the right consistency.
- **The chocolate MUST be melted before putting in the fountain. A microwave oven is recommended for at least 3 minutes. Follow melting instructions on chocolate.**
- Carefully pour the melted chocolate into the fountain. Additional melted chocolate can be added to the fountain during use.
- Turn the on/off switch to ON to start the auger. **DO NOT start the auger before the chocolate is poured into the machine!**
- If the chocolate starts to harden, turn the heat dial to LOW for several minutes, **NEVER turn the dial to high heat, as the machine will overheat.**

**Important Note:** The auger motor generates heat and is designed for approximately 2 to 3 hours of use. Operating the fountain for a substantially longer period or operating the fountain with the auger running and the heat on at a higher setting could cause the motor to overheat.

**Important Note:** If the auger is turned off for more than a few minutes, the chocolate in the auger tube will harden. The auger tube will need to be cleaned out before the auger can be restarted. Forcing the auger to spin with the hardened chocolate in the auger tube will cause damage to the motor. If the motor is strained, the reset breaker will turn off the motor. Once the auger tube is cleaned, the motor can be restarted by pressing the reset button that is under the on/off switch.

## **Cleaning The Fountain:**

- Warm/hot water is best to clean the fountain.
- The fountain disassembles into three parts, the auger tube, the auger, and the bowl.
- Remove the auger tube by simply pulling it up off the four stainless posts.
- Pull the auger off of the t-shaft.
- Clean all parts with hot water, the inside of the bowl can be filled with water for cleaning. **DO NOT immerse the base of the fountain in water!**

**ABC RENTAL  
PARMA HTS.  
NORTH RIDGEVILLE  
440 886 0018**